

ANSMANN®

DIGICHARGER PLUS

Verwendungsübersicht • Comparison list

www.infrarossi.it

**Suitable for camcorders and digital cameras
of the following suppliers and types identical in construction:**

*

**Canon • Casio • Fuji
Hitachi • JVC • Kodak • Konica
Kyocera • Minolta
Nikon • Olympus • Panasonic
Pentax • Polaroid • RCA • Ricoh
Samsung • Sanyo • Sharp
Sony • Thomson • Toshiba**

* Eingetragene Warenzeichen des jeweiligen Herstellers * Registered Trademarks of each manufacturer

CANON

MX 20i / 25i / 30i / 35i / 200i / 250i • MV 800 / 830i / 850i / 880x / 950 / 960 • MV X 20i / 25i / 30i / 40 / 45 / 300 / 330 / 350 / 35i / • MV 4i / 4i MC / 5/5i/5i MC / 6 / 6i / 950 / 960 • Elura 40 / 80 / 85 / 90 • Optura 50 / 60 • ZR 100 / 200 / 300 / 400	A-Can NB 2 LH 5022673	7,4 V	720
MV 30 / 30i / 300 / 300i / 400 / 400i / 430i / 450i / • MV 500 / 500i / 530i / 550i / 590 / 600i / 630i / 650i / • MV 700 / 700i / 730i / 750i • MVX 1i / 2i / 3i / 100i / 150i • FV 40 / 400 • ZR 10 / 25 / 30 / 40 / 45 / 50 / 50MC / 60 / 60MC / 70 / 80 / 85 / 90 / POWER SHOT G1, G2 Pro 90	Canon BP 511 A-CAN BP 511 5022283	7,4 V	1400
MV 300 / 400 / 500 / 600 / 800 Serie / 880X • MV 700 Serie • MV X 100i / 150i • X 1i / 2i / 3i • MV 30 / 30i • ZR 10 / 25 / 30 / 40 / 45 / 50 / 50MC / 60 / 60MC / 70 / 80 / 85 / 90 / POWER SHOT G1, G2 Pro 90	A-Can BP 522 5022633	7,4 V	2800
X 200 / 200i / 250 • MV 6i • MV 800 Serie / MV 900 / MV 930 • MVX 40 / MVX 45i / 20i / 25i / 30 / 35i / • MVX 200 / 200i / 250i / 300 / 330i / 350i • Elura 60 / 65 / 70 / 80 / 85 / 90 • FV 500 • FVM 30 / 100 / 200 • IXY DV 3 / 5 • Optura 30 / 40 / 50 / 60 / 400 / 500 • ZR 100 / 200 / 300 / 400	A-Can BP 2 L 14 5022663	7,4 V	1450

PANASONIC

VDR-D 150 / D 250 / D 300 • VDR M 50 / 70 NV-GS 10 / 17 / 21 / 22 / 27 / 30 / 33 / 35 / 37 / 40 / 50 / 55 / 70 / 75 / 140 / 150 / 180 / 200 / 280 / 300 / 500 • 65/70 EG-S/75	A-Pan - DU 14 5022373	7,4 V	1300
VDR-D 150 / D 250 / D 300 • VDR M 30 / 50 / 70 NV-GS 10 / 17 / 21 / 22 / 27 / 30 / 33 / 35 / 37 / 40 / 50 / 55 / 70 / 75 / 140 / 150 / 180 / 200 / 280 / 300 / 500 • 65/70 EG-S/75 • PV-GS 30 / 50S / 70	A-Pan DU 21 5022423	7,4 V	1900

SONY

HDR-HC 1 / 3 • DVD 91 / 101 / 201 • DCR HC 14 • DCR TRV 255 / 265 / 460 • CCD TRV 228 / 428/108/118/138/140/18/19/20/208/238/240/245/25/338/308/340/345/408/418/425/50/608/740 • DCR-TRV8 / TRV 10	A-Son NP QM 71 D 5022543	7,4 V	2600
DCR HC 90 • DCR PC 1000 E • DCR PC 55 ES	A-Son NP FA 70 5022683	7,4 V	800
DCR HC 90 • DCR PC 1000 E • DCR PC 55 ES • DCR-DVD 7	A-Son NP FA 50 5022693	7,4 V	500
HDR-HC 1 / 3 • DVD 91 / 101 / 201 • DCR HC 14 • DCR TRV 8 / 10 / 255 / 265 / 460/25/250/260/27/270/280/285/30/330/345/340/350/355/38/39/40/408/418/428/430/460/480/6/60/70/725/730/738/80/828/830/840 • CCD TRV 228 / 428 • DCR PC 100/101/103/104/105 • DSC F70 • DSCS 30/50/70/S75/S85 • GVD 200 PDX / 10 • MVC - CD 200/300	A-Son NP FM 50 5022573	7,4 V	1400
DCR DVD 92 /100/101/103/ 105 / 200 / 201 / 202 / 203 / 205 / 300 / 301 / 403 / 404 / 405 • DCR HC 42. E/ 16 / 17 / 18 / 19 / 20 / 21 / 22 / 23 / 24 / 30 / 32 / 35 / 39 / 40 / 42 / 44 / 46 / 65 / 94 / 96	A-Son NP FP 50 5022583	7,4 V	700
DCR DVD 92 /100/101/103/ 105 / 200 / 201 / 202 / 203 / 205 / 300 / 301 / 403 / 404 / 405 • DCR HC 42. E/ 16 / 17 / 18 / 19 / 20 / 21 / 22 / 23 / 24 / 30 / 32 / 35 / 39 / 40 / 42 / 44 / 46 / 65 / 94 / 96 • DCR SR 30 / 50 / 70 / 90	A-Son NP FP 71 5060263	7,4 V	1400

ALDI

Traveller Slimline X5	A-Min NP 900 5022643	3,7	750
Traveller DC-8600	A-Fuji NP-40 50222483	3,7 V	700

BENQ

DC 40 • DC C 50 / 60 • Finepix F401 / 601 / 50i, M603 • Kodak LS420 / LS443	A-Fuj NP-60 5022273	3,7	1000
DC E 43 / E 53	A-Min NP-900 5022643	3,7 V	750
DC P 500 E 510 / E 520 / E 520+	A-Cas NP - 40 5022303	3,7 V	1100
X 600	A-Fuji NP-40 50222483	3,7 V	700

CANON

EOS 1 D Mark II N • EOS 1 DS Mark II	A-Can NP E3 5032202	12V	2000
Ixus 300 / 330 / 400 / 430 / 500 • Digital Ixus V / V 2 / V 3 • Digital 200 / 300 / 320 / 400 / 450 / 500 • Powershot S 100 / S 110 / S 200 / S 230 / S 300 / S 330 / S 400 / S 410 / S 500 • Elph Power 5100 / 5110 / 300	A-Can NB 1 LH 5022233	3,7 V	950
Powershot S 30 / S 40 / S 45 / S 50 / S 60 / S 70 / S 80 • Rebel XT • EOS 350 D / 400 D	A-Can NB 2 LH 5022673	7,4 V	720
Ixus 1 / Digital Ixus 2 / Digital Ixus • Ixus i5 • Ixus 700 / 750 • IXY Digital 30 / 600 • IXY Digital L 2 • Canon SD-100, Ixus II	A-Can NB 3 L 5022253	3,7 V	750
Digital Ixus Wireless • Ixus 30 / 40 / 50 / 55 / 60 / 65 • IXY Digital 40 / 50 / 55 • iZoom	A-Can NB 4 L 5022263	3,7 V	700
EOS 10 D / 20 D / 30 D / 300 D / D - 30 / D - 60 / EOS 5 D • EOS Rebel • Powershot G 1 / G 2 / G 3 / G 5 / G 6 • Powershot Pro 1 / Pro90 • ZR 10 / 25	A-Can BP 511 5022283	7,4 V	1400

CASIO

Exilim EX-S 500 / EX S-600 / EX S-600D / EX-S770 / EX S-100 / EX 23 / EX S1 • EX-Z5 / EX Z-70 EX M-1 / S1 / M2 • EX-S1PM, S1, S3	A-Cas NP 20 5022773	3,7	600
--	------------------------	-----	-----

EX - Z 30 / EX - Z 40 / EX - Z 50 / EX - Z 55 • EX - P 600 / EX - P 700 / EX-P 505 • EX-Z 57 / EX-Z 750 / EX-Z 500 / EX-Z 700 • EX-Z 600 / Z 850 / Z 1000	A-Cas NP - 40 5022303	3,7 V	1100
CONTAX			
Tvs digital	A-Pen Li 7 5022293	3,7 V	1450
FUJI			
Finepix F401 / F601 / F-410 , M 603 / M 50i • Kodak LS420/LS443	A-Fuj NP-60 5022273	3,7 V	1000
Finepix M 603 • Finepix F 10 / F 11	A-Pen Di LI 7 5022293	3,7 V	1450
Finepix F 440 / 450	A-Fuj NP-30 5022473	3,7 V	450
Finepix F 610 / F 650 / F 700 / F 710 / F 810 / F 811 • Finepix F 402 / F 455 / 460 / 470 • Finepix V 10 • Finepix Z1 / Z2	A-Fuji NP-40 50222483	3,7 V	700
HP			
Photosmart R 507 / 607 / 707 / 717 / 817 / 818 Finepix F401 / 601 / 50i, M603, Kodak LS420 / LS443	A-Fuj NP-60 5022273	3,7 V	1000
KODAK			
Easy Share LS 420 / LS 443 / LS 633 / LS 743 / LS 753 • Easy Share DX 6490 / 7440 / 7590 / 7630 • Easy Share Z 730 / 760 / 7590 • Finepix F401 / 601 / 50i, M603, Kodak LS420 / LS443	A-Fuj NP-60 5022273	3,7 V	1000
Easy Share One • Z 730 / 760 / 7590 • P 712 / 850 / 880 • DX 6490 / 7440 / 7590 / 7630	A-Kod Klick 5001 Pro 5022873	3,7	1800

KONICA MINOLTA

Dimage X1	A-Min NP 1 5022893	3,7	700
Dimage A1 / A 2 • Dynax 7 Digital / Dynax 5D	A-Min NP 400 5022403	3,7 V	1450
Dimage G 400 / 500 • Dimage KD 420 Z • Revio KD-310 Z / KD-400 / KD-410 Z / KD-500Z / KD-510Z	A-Min NP500 5022383	3,7 V	900
Dimage X / Xi / XT / XG	A-Min NP 200 5022393	3,7 V	750
Dimage X 50	A-Min NP 700 5022323	3,7 V	750
Dimage A 200	A-Min NP-800 5022653	7,4 V	800
Dimage E 40 / 50	A-Min NP 900 5022643	3,7 V	750

LEICA

D-Lux 2 • C-Lux 1	A-Pan CGA S005 5022783	3,7	1100
-------------------	---------------------------	-----	------

MAGINON

X4 / X5	A-Min NP-900 5022643	3,7 V	750
DC 4211 / 52222	A-Min NP 900 5022643	3,7 V	750

NIKON

D 2X • D 2HS • F 6 (MB 40)	A-Nik EN EL 4 5022713	11 V	2200
Coolpix 775 / 880 / 885 • Coolpix 990 / 995, E880 • Coolpix 4300 / 4500 / 4800 • Coolpix 5000 / 5400 • Coolpix 5700 / 8700	A-Nik EN EL 1 5022413	7,4 V	730

D 70 / D 70s / D 50 • D 100, D100 SLR	A-Nik EN EL 3 5022433	7,4	1400
Coolpix S10 • Coolpix 3700 • Coolpix 4200 / 5200 • Coolpix 7900/ 5900 •,Coolpix P3 / P4	A-Nik EN EL 5 5022333	3,7 V	1050
Coolpix S 1 / S 2 / S 3 / S 5 / S 6 / • S 7c / S 8 • Cooplux P 1 / P 2	A-Nik EN EL 8 5022703	3,7 V	500
OLYMPUS			
Camedia C - 50 / C - 5000 • Camedia C - 675 / C - 760 ZU / • C - 765 Ultra / C - 770 ZU • Mju: 300 / 400 / 410 / 500 / 600 / 800 / 810 / 1000 • C50 / C-60 / C-70 / C470 • FE-200	A-Oly Li 10 B / 12 B 5022443	3,7 V	800
E 1 / E 300 / E 330 / E 500 • Camedoa C - 8080	A-Oly BC M1 5022453	7,4 V	1500
mju : mini / mini S	A-Oly Li 30 B 5022353	3,7 V	645
Mju:700 / Mju 720 SW / 725 SW / 730 / 740 / 750 • FE 160 /	A-Oly Li 42 B 5022933	3,7V	750
PANASONIC			
Lumix FZ 10 / 20 • Lumix FZ 1/2/3 • Lumix FZ 4/5 • NV-GS10 / 30 / 40 / 50 / 70 • PV-GS50 / 50S / 70 • VDR-M30	A-Pan CGA S002 5022613	7,4 V	650
Lumix FX 2 / 7	A-Pan CGA S004 5022623	3,7	650
Lumix LX 1 / FX 01 / FX 07 • FX 8 / FX 9 / FX 07 • FX 50 • LX 2	A-Pan CGA S005 5022783	3,7	1100
Lumix FZ 7 • Lumix FZ 30 / FZ 50	A-Pan CGA S006 5022903	7,4	800
TZ-1	A-Pan CGA S007 5022963	3,7	800
DMC L-1	A-Pan CGR S603 5044063	7,4	1400

Optio A 10 / A 20 • Optio S / S 4i / S 4s / S 5 / S 6 / S 7 • Optio T 10 • Optio X / Optio SV / Optio WP / Wpi / W 10 / W 20	A-Pen D Li 8 5022463	3,7 V	500
PENTAX			
Optio 330 / 430 / 330 RS / 430 RS • Finepix F401 / 601 / 50i • M603, Kodak LS420 / LS443	A-Fuj NP 60 5022273	3,7 V	1000
Optio 450 / 550 / 555 / 750 Z • Optio MX	A-Pen D Li 7 5022293	3,7 V	1450
PREMIER			
DS-8650	A-Fuji NP-40 50222483	3,7 V	700
RICOH			
Caplio R 3 / R 4 / 30	A-Pan CGA S005 5022783	3,7	1100
Caplio RZ 1 / • Caplio RX / RR 10 / RR 30 G 3 / G 4 / G 4 wide • Finepix F401 / 601 / 50i, M603, • Kodak LS420/ LS443	A-Fuj NP 60 5022273	3,7 V	1000
ROLLEI			
dp 4200 / 5200 / 6200	A-Min NP 900 5022643	3,7	750
DR-5100	A-Fuj NP 60 5022273	3,7	1000
SAMSUNG			
Digimax i5 / i50 MP3 • Digimax L 50	A-Sam 0737 5022803	3,7	650
Digimax V 700 / V-800 • U-CA 5	A-Sam 1137 5022793	3,7	1100
Digimax NV 3 / NV 7ops / NV 10 • Digimax L 50 / L 60 • i6	A-Min NP 1 5022893	3,7	700

SANYO

VPC - A5	A-Min NP 700 5022323	3,7 V	750
----------	-------------------------	-------	-----

SONY

DSC R-1 • Cybershot F 828 • Cybershot DSC F 707 / F 717 • DCR-TRV8 / TRV10, DSCS 50 / 70 / 30 / S75 / S85, MVC-CD200 / 300	A-Son NP FM 50 5022573	7,4 V	1400
DSC P-100 / 120 / 150 / 200 • Cybershot T 3 / T 30 • Cybershot L 1	A-Son NP-FR 1 5022363	3,7 V	950
DSC T33 / T5 / T 9 / T 10 • DSC M2	A-Son NP-FT 1 5022603	3,7 V	650
Alpha S 100	A-Son NP FM 55H 5022993	7,4	1450
Cybershot T 7	A-Son NP FE-1 5022723	3,7	500

VOIGTLÄNDER

Virtus D4	A-Min NP 900 502264	3,7	750
-----------	------------------------	-----	-----

NOTES

ANSMANN®

A large, stylized graphic element behind the logo, consisting of a thick, grey, curved line that starts from the left, curves upwards and then downwards, ending on the right side of the page.

**Weitere aktuelle Informationen: • For further actual information see:
www.ansmann.de/digichargerplus**

ANSMANN ENERGY GMBH
Industriestr. 10
D-97959 Assamstadt • Germany
e-Mail: verkauf@ansmann.de
Internet: <http://www.ansmann.de>